To: T10 Technical Committee

From: Tim Symons, PMC-Sierra (Tim\_Symons@pmc-sierra.com)

Date: 18 Aug 2006

Subject: 06-377r0 SAS-2 Broadcast (Activate)

#### **Revision Information**

Revision 0: First draft.

#### **Referenced Document**

sas2r05a Serial Attached SCSI – 2 (SAS-2) revision 5a 06-286r4 SAS-2 SMP ZONE LOCK (Tim Symons, PMC-Sierra). 06-288r5 SAS-2 SMP ZONE ACTIVATE function (Tim Symons, PMC-Sierra) 06-289r4 SAS-2 SMP ZONE UNLOCK (Tim Symons, PMC-Sierra) 06-358r1 SAS-2 Zone Configuration model (Tim Symons, PMC-Sierra)

## Overview

Re-define Broadcast (Reserved 3) to Broadcast (Activate) to be used by an active zone manager to request every locked zoning expander device to copy the zoning expander shadow registers into the zoning expander registers to make the values active.

#### 4.1.12 Broadcasts

. . .

Table 6 - Broadcast types

Broadcast	Description				
Broadcast (Reserved 3)	Reserved. SAS ports shall ignore this Broadcast.				
Broadcast (Activate)	Originated by the active zone manager to request all locked zoning expander devices to copy the zoning expander shadow registers into the zoning expander registers to make the values active.  Devices that are not locked zoning expander devices shall ignore				
	this Broadcast.				
•••					

. . .

#### 4.6.6.5 BPP interface

• •

Table16 - Expander phy to BPP requests

Message	Description				
Broadcast Event Notify	Request to forward a Broadcast (Reserved 3) because a				
(Reserved 3 Received)	Broadcast (Reserved 3) was received.				
Broadcast Event Notify	Request to copy the zoning expander shadow registers into the				
(Activate Received)	zoning expander registers to make the values active (see				
	10.4.3.xx) and forward a Broadcast (Activate) because a				
	Broadcast (Activate) was received.				
•••					

. . .

## 7.2.2 Primitive summary

Table 79 - Primitives not specific to type of connection (part 1 of 2)

		_				<del>\</del>		
	Use <sup>a</sup>	From <sup>b</sup>			To <sup>b</sup>			Primitive
Primitive		I	Ε	Т	I	Ε	T	sequence type <sup>c</sup>
	_							
BROADCAST (RESERVED 3) BROADCAST (ACTIVATE)	NoConn	Ι	Е		-	Е		Redundant

# 7.2.3 Primitive encodings

Table 82 - Primitive encoding for primitives not specific to type of connection (part 1 of 2)

Primitive	Character					
Timilitye	1st	1st 2nd		4th (last)		
BROADCAST (RESERVED 3) BROADCAST (ACTIVATE)	K28.5	D04.7	D16.7	D02.0		

## 7.2.5.5 BROADCAST

**Table 88- BROADCAST primitives** 

Primitive	Description			
BROADCAST (RESERVED 3)	Broadcast (Reserved 3)			
BROADCAST (ACTIVATE)	Broadcast (Activate)			
	••			

## 10.4.3.11 REPORT PHY BROADCASTCOUNTS function

The BROADCAST ACTIVATE RESERVED 3 COUNT field indicates the value of a wrapping counter counting the number of Broadcast (Activate)s (Reserved 3)s received from an end device attached to the specified phy. This field shall be set to zero at power on. If implemented, the expander device shall increment this field at least once when it receives a Broadcast (Activate) (Reserved 3) from an attached end device and shall not increment this field when it receives a Broadcast (Activate) (Reserved 3) from an attached expander device.

# 10.4.3.16 ZONED BROADCAST function

Table 247 - BROADCAST TYPE field

Code	Description		
	•••		
110b	Broadcast (Reserved 3)		
	Broadcast (Activate)		

...

# Annex J

(informative)

# **Primitive encoding**

• • •

Table J.1 — Primitives with Hamming distance of 8 (part 1 of 3)

Table 6.1 1 Tillillities with Hallinning distance of 6 (part 1 of 6							
1st	2nd	3rd	4th	Assignment			
***							
K28.5	D04.7	D16.7	D02.0	BROADCAST (RESERVED 3) BROADCAST (ACTIVATE)			
***							

...